



MODEL AB

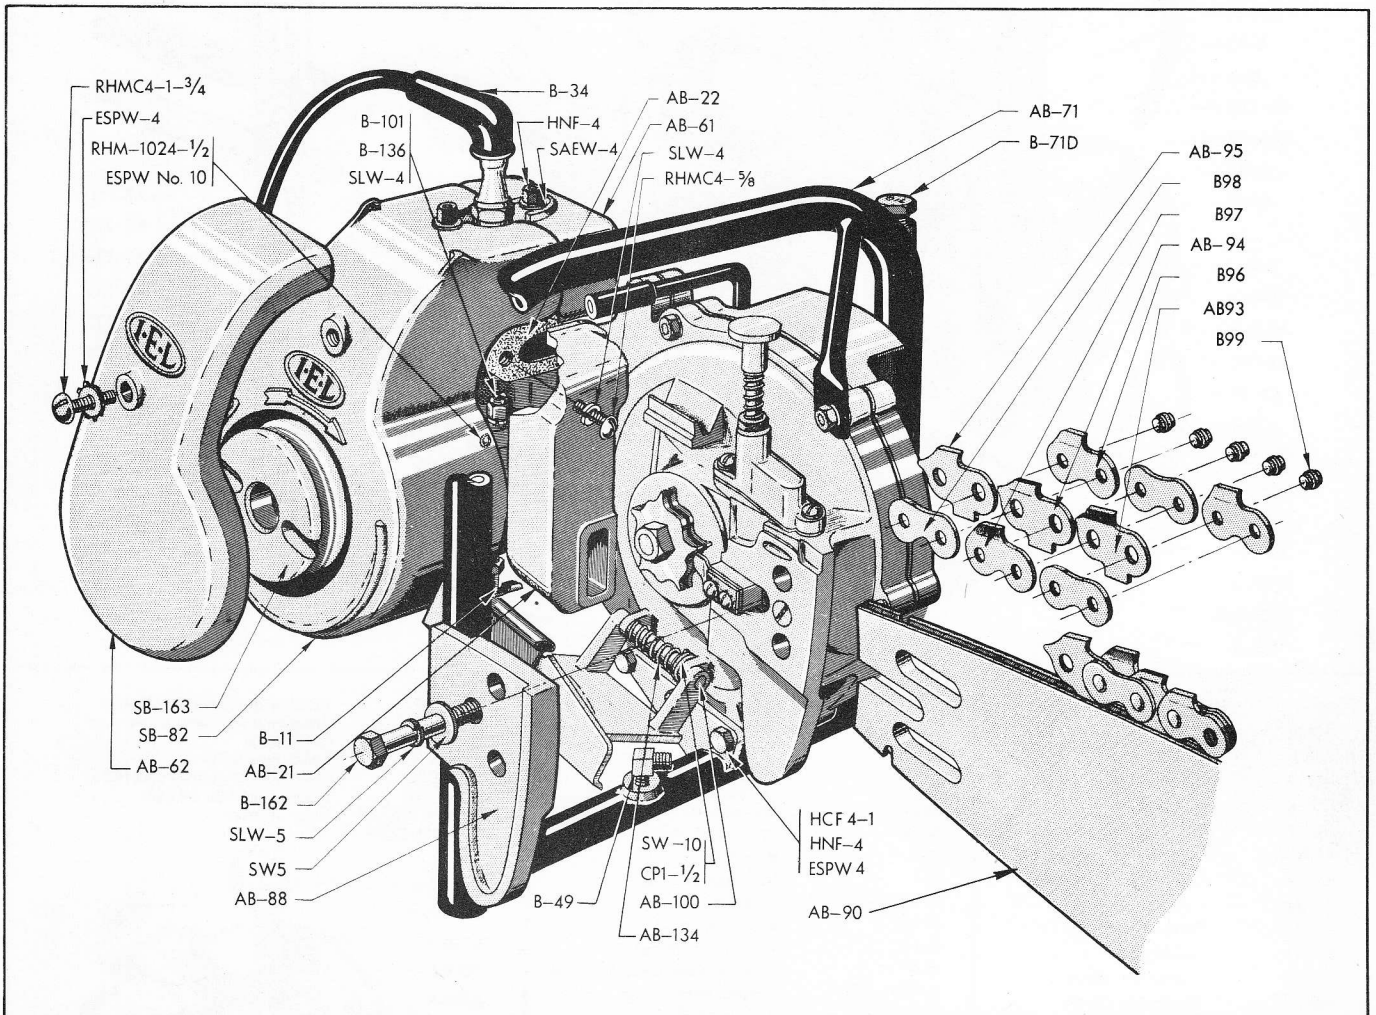

AB-21	Exhaust manifold	SB-82	Blower shroud	HNF-4	1/4 SAE nut
AB-22	Exhaust manifold gasket	SB-163	Manual starter pulley	HCF-4-1	Handle bar bolt
AB-61	Outlet deflector	B-11	Drain cock	RHMC-4-5/8	Exhaust manifold screw
AB-62	Inlet deflector	B-34	Spark plug cover	RHMC 4-1-3/4	Shroud holding screw
AB-71	Handlebar	B-49	Elbow	RHM 1024-1/2	Shroud holding screw
AB-88	Strut	B-71D	Oil filler plug	CP1-1/2	Cotter pin
AB-90	Cutter bar (specify length)	B-96	Right side cutter	ESPW 4	Shroud holding washer
AB-92	Sawing Chain " "	B-97	Left side cutter	ESPW 10	Star washer
AB-93	Right raker	B-98	Side link	SLW-4	Lock washer
AB-94	Centre raker	B-99	Rivet	SLW-5	Bar retaining bolt lock
AB-95	Left raker	B-101	Cylinder base stud	SW-5	Bar retaining bolt washers
AB-100	Hinge pin	B-136	Cylinder base nut	SW-10	Washer
AB-134	Hinge pin spring	B-162	Cutter bar retaining bolt	SAEW-4	Shroud holding washer


MODEL AB

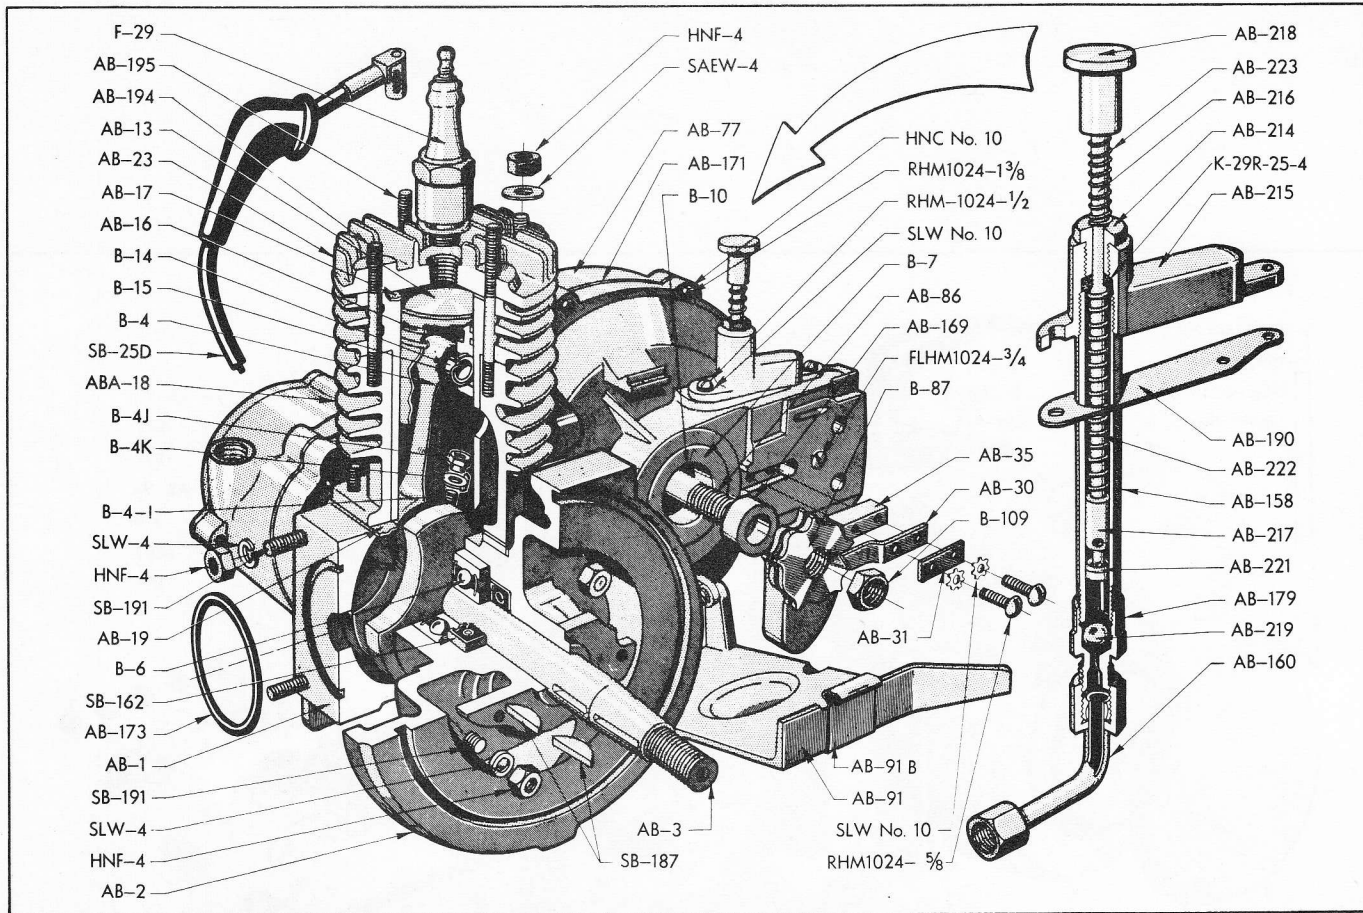


- AB-1 Crankcase assembly
- AB-2 End housing
- AB-3 Crankshaft
- AB-13 Piston
- AB-16 Piston rings
- AB-17 Cyl. head gasket
- ABA-18 Cylinder ass. (complete)
- AB-19 Cylinder base gasket
- AB-23 Cylinder head
- AB-30 Sprocket finger
- AB-31 Guide plate
- AB-35 Cutter bar guide
- AB-77 Chaincase cover
- AB-86 Sprocket shaft
- AB-91 Chain guard (complete)
- AB-91B Chain guard (spring only)
- AB-158 Intake extension
- AB-160 Oil tube
- AB-169 Sprocket shaft sleeve
- AB-171 Chaincase cover gasket
- AB-173 Swivel grommet
- AB-179 Oiler intake connector with nut and ferrule
- AB-190 Oiler gasket
- AB-194 Short cylinder head stud
- AB-195 Long cylinder head stud
- AB-214 Gland nut
- AB-215 Oiler body
- AB-216 Plunger rod
- AB-217 Plunger
- AB-218 Knob
- AB-219 Check valve
- AB-221 Plunger Grommet
- AB-222 Plunger spring (internal)
- AB-223 Plunger spring (external)
- SB-25D Spark plug wire
- SB-162 Magneto end seal

- SB-187 Crankshaft key
- SB-191 Swivel and end housing studs
- B-4 Connecting rod
- B-4J Conrod bolt
- B-4K Conrod nut
- B-6 Main bearing
- B-7 Sprocket shaft seal
- B-10 Retainer clip
- B-14 Wrist pin
- B-15 Wrist pin retainer
- B-87 Cutting chain drive sprocket
- B-109 Cutting chain drive sprocket nut
- B-136 Cylinder base nut
- F-29 Spark plug
- K-29R-25-4 Gland nut packing
- SLW4 Swivel washer (3 used)
- SLW No. 10 Oiler mounting washers (2 used)
- HNF No. 4 Swivel nuts (3 used)
- HNC No. 10 Chaincase cover nuts
- SAEW No. 4 Cylinder head washers
- RHM1024-5/8 Guide plate screws
- RHM1024-1/3/8 Chaincase cover screws
- RHM1024-1/2 Oiler mounting screws
- RHM1024-3/4 Combination Nut
- X5345F Coil
- X5388 Stator plate replacement unit
- 6318F Cam wiper felt
- X5342F Condenser
- 5411F Condenser clamp screw (and fixed contact)
- 1XA-256F Fixed contact clamp screw washer
- 10407F Breaker arm spacer washer
- X5474F Contact replacement set
- 4210F Breaker arm lock


- 3219F Breaker arm spacing washer
- 6017F Breaker arm clamp screw
- 10383F Coil wedge
- SB-25D Spark plug wire
- SB-25B Flywheel (Wico No. Y5419F)
- SB-25C Cam (Wico No. 5416F)
- SLW No. 12 Lock washer
- RHM-1224-1/2 Screw

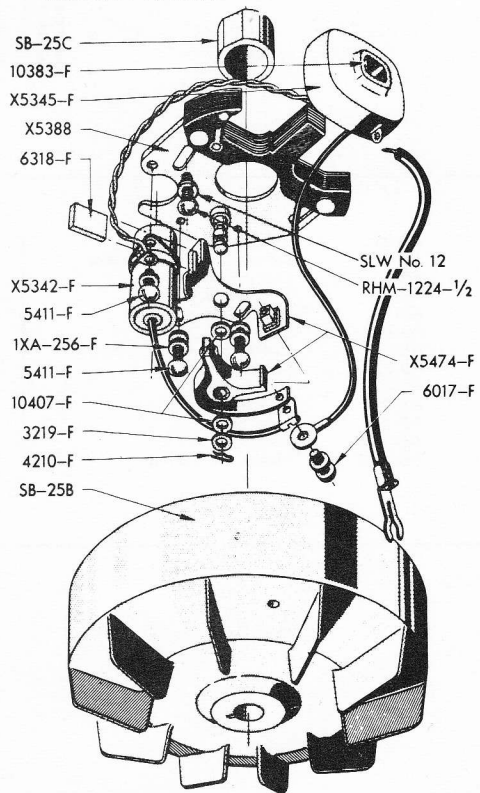


MODEL AB

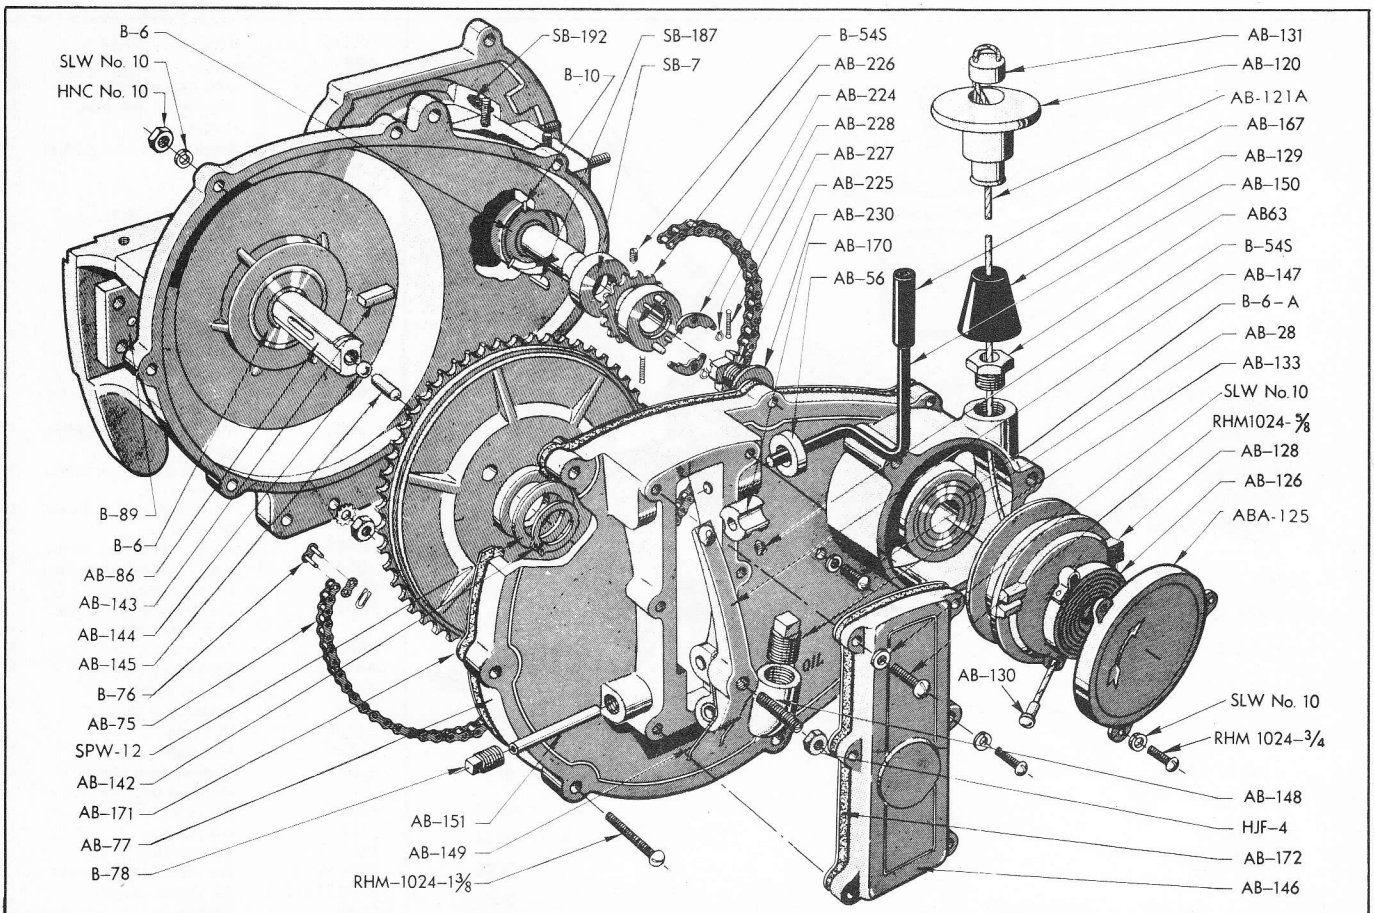


AB-28	Vent screw	AB-148	Clutch arm adjust'g screw
AB-56	Clutch lever seal	AB-149	Clutch arm spring
AB-63	Starter rope bushing	AB-150	Clutch release lever
AB-74	Clutch sprocket assembly (sold only with corks and needle race complete)	AB-151	Hinge pin for clutch arm
AB-74B	Clutch sprocket cork inserts	AB-167	Clutch release lever grip
AB-74C	Clutch needle bearing	AB-170	Clutch cam
AB-75	Drive chain	AB-171	Chaincase cover gasket
AB-77	Chaincase cover	AB-172	Clutch cover gasket
SPW-12	Clutch washer	AB-174	Clutch needle race
AB-86	Clutch shaft	AB-224	Starter pawl (2 used)
AB-120	Starter Handle	AB-225	Starter driver
AB-121A	Starter rope to be supplied complete with ferrule AB-130	AB-226	Crankshaft sprocket
ABA-125	Starter cover (to be supplied complete with pin AB-127)	AB-227	Starter pawl spring (2 used)
AB-126	Starter rewind spring	AB-228	Starter pawl clip (2 used)
AB-128	Starter pulley	AB-230	Driver washer
AB-129	Starter buffer	SB-7	Drive end seal
AB-130	Starter rope ferrule	SB-187	Crankshaft key
AB-131	Starter rope anchor	SB-192	Grommet
AB-133	Oil level plug	B-6	Main bearing (4 used)
AB-138	Clutch plate assembly	B-6A	Bearing for starter pulley.
AB-139	Clutch thrust plate (inner)	B-10	Retaining clip
AB-140	Clutch thrust plate (outer)	B-545	Clutch cam set screw (also sprocket)
AB-141	Clutch spring (to be supplied in sets of 4 only)	B-76	Connecting link
AB-142	Clutch retaining clip	B-78	Plug for hinge pin
AB-143	Clutch thrust key	B-89	Combination nut
AB-144	Thrust ball	HJF-4	Clutch arm ad. screw nut
AB-145	Thrust pin	SLW No. 10	Clutch cover washers
AB-146	Clutch cover	RHM 10-24-5/8	Clutch cover screws
AB-147	Clutch arm	RHM 10-24-3/4	Rewind cover screw
		RHM 10-24-1 3/8	Chaincase cover screws
		HNC No. 10	Chaincase cover nuts

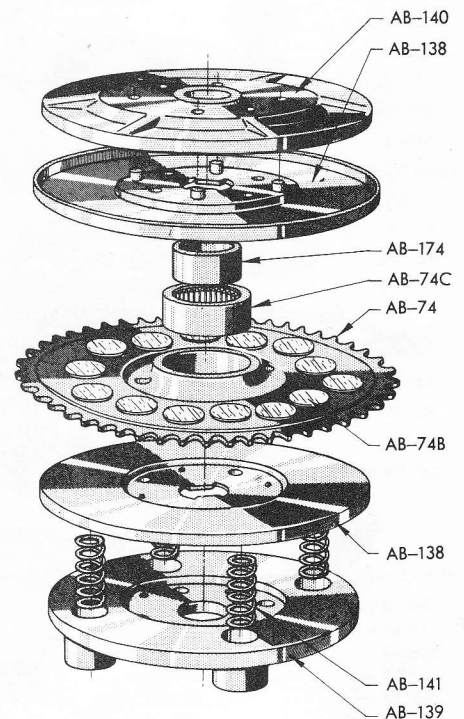

MODEL AB

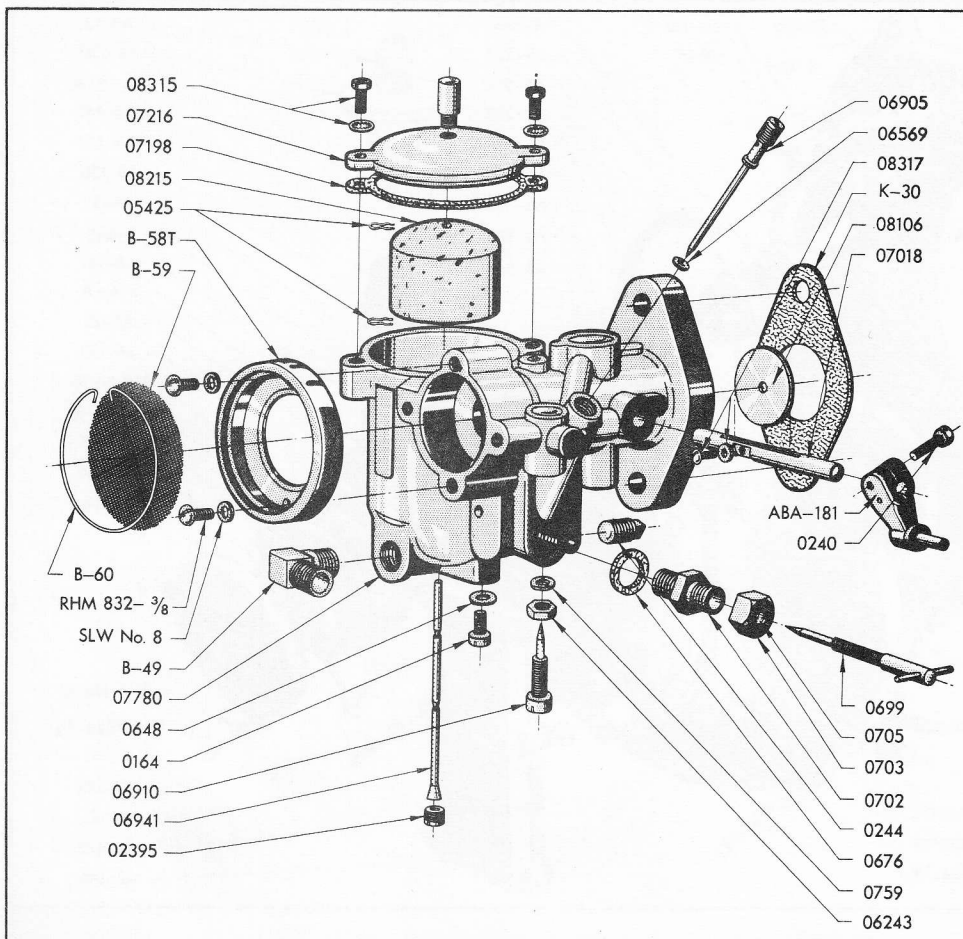

- 07216 Float bowl cover
- 08315 Float bowl cover screw and lockwasher
- 05425 Float bowl retaining cotter pin
- 07198 Float bowl cover gasket
- 08215 Float
- 07780 Body
- 06941 Inlet valve, seat and gasket
- 02395 Inlet valve channel plug screw
- 06910 Idle adjustment screw
- 06243 Idle adjustment screw locknut
- 0759 Idle adjustment screw lockwasher
- 0676 Main adjustment screw gland gasket
- 0702 Main adjustment screw gland
- 0703 Main adjustment screw packing nut
- 0705 Main adjustment screw packing
- 0699 Main adjustment screw
- 0244 Body channel pipe plug
- 07018 Throttle shaft
- 08317 Throttle shutter screw and lockwasher
- 08106 Throttle shutter
- ABA-181 Rocker arm with pin
- 0240 Rocker arm screw
- K-30 Carburetor gasket
- 06905 Idle tube
- 06569 Idle tube gasket
- B-49 Compression elbow with nut and ferrule
- B-58T Air screen bowl
- B-59 Air screen
- B-60 Air screen clip
- SLW No. 8 Air screen lock washer
- RHM832-3/8 Air screen screws
- 0648 Gasket
- 0164 Screw

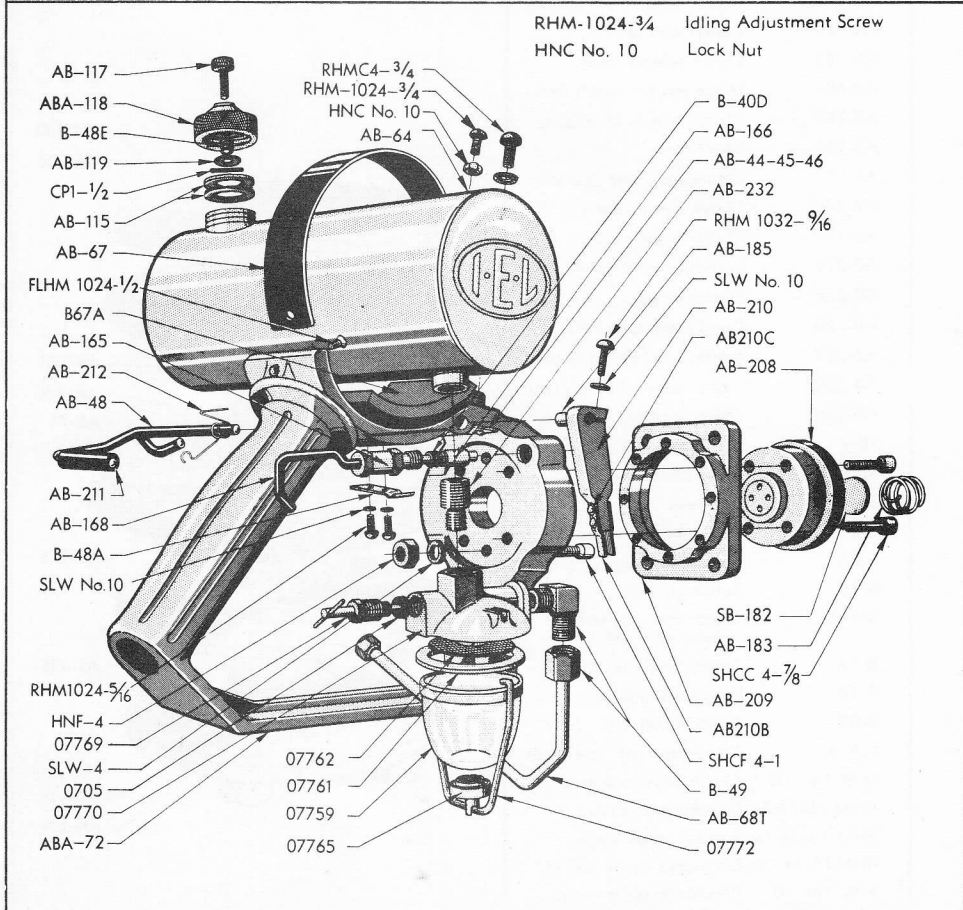

- RHM1024-3/4 Idling Adjustment Screw
- HNC No. 10 Lock Nut
- AB-117 Throttle stop spring washer and rivet
- ABA-118 Throttle rod
- B-48E Tank
- AB-119 Tank holding band
- CP1-1/2 Fuel Line
- AB-115 Gas tank cap gasket
- AB-67 Air vent valve
- FLHM 1024-1/2 Vent washer
- B67A Swivel lock body
- AB-165 Swivel lock pin
- AB-212 Swivel lock trigger
- AB-48 Reed valve spring
- AB-211 Throttle rod spacer
- AB-168 Reed valve body
- B-48A Swivel ring
- SLW No.10 Rocker arm lever assy.
- RHM1024-5/16 Spring
- HNF-4 Rivet
- 07769 Throttle grip
- 07770 Throttle spring
- SLW-4 Filter complete
- 0705 Filter adapter
- 07759 Shut-off valve packing
- 07761 Strainer bowl
- 07762 Strainer gasket
- 07765 Strainer screen
- 07769 Cup and thumb nut
- 07770 Shut-off valve
- 07772 Strainer cover
- ABA-72 Clamp wire and stud
- ABA-118 Rear handle
- SB-182 Gas tank cap assy.
- B-40D Reed valve
- B-48A Swivel lock spring
- B-48E Throttle clip
- B-49 Spring
- B-67A Compression elbow
- CP1-1/2 Felt cushion
- FLHM-1024 1/2 Split pin
- HNF4 Tank holding screw
- RHM1024-5/16 Carburetor nuts
- RHM-1032 9/16 Throttle clip screw
- RHMC4 3/4 Screw
- SHCC4-7/8 Tank clamp
- SHCF4-1 Cap screws
- SLW4 Carburetor cap screws
- SLW No. 10 Carburetor washers
- Lock washer