

Part no.	Qty	Description	Position	Part no.	Qty	Description	Position	Part no.	Qty	Description	Position	Part no.	Qty	Description	Position	
201581	4	Cylinder pin	C2, E3	268010	1	Cover	C4	300716	1	Crankshaft with connecting rod and ball bearing	C2	316423	1	Ball	A4	
202914	1	Cylinder pin	D4	268107	1	Spring holder	D3	301004	2	Woodruff key	C2	316426	1	Throttle shaft	A4	
202919	1	Spindle	E1	268255	1	Flanged washer	B2	302009	1	Bearing bushing	D4	316427	1	Throttle	A4	
205905	1	Spindle	D1	268258	1	Holder for felt seal	C4	302216	1	Needle cage	C2	316428	1	Shaft lock	A4	
209033	1	Cotter pin	D3	268259	1	Spring case	E3	302323	1	Needle bearing	C2	316429	1	Diaphragm cover	A3	
212047	1	Rivet	D4	268261	1	Washer	E4	302412	1	Needle bearing	C2	316430	1	Pump cover	A4	
218907	1	Pin	D4	269008	1	Clutch cover	B2	302415	1	Needle bearing	B2	316431	4	Screw with spring washer	A4	
220909	2	Stud	C1	269034	1	Puller unit	A2	302416	1	Needle bearing	C2	316433	1	Choke axle	A4	
230147	1	Screw	B4	269066	1	Cap	E2	302706	1	Ball bearing	C2	316434	1	Spring	A4	
230149	4	Screw	B4, D3	269071	1	Holder	E1	303031	1	Starter gear	D4	316435	2	Bushing	A4	
230153	2	Screw	D3	269072	1	Control rod	E2	303035	1	Starter housing	E4	317113	1	Pump cover	D4	
230154	2	Screw	C4	269073	1	Stay plate	C2	303036	1	Flange	D3	317124	1	Pump plunger	D4	
230902	1	Screw	A2	269076	1	Holder	C1	303037	1	Starter hub, compl.	D3	317127	1	Pump housing	C4	
230913	1	Screw	E2	269077	1	Cap	E3	303160	1	Centrifugal clutch, compl.	B2	317137	1	Pump rod	C4	
230914	1	Screw	C2	269086	1	Control rod	D1	303161	1	Clutch hub	B1	317146	1	Oil pump, compl.	C3	
230916	3	Screw with washer	E3	269107	1	Starter cable attachment	E3	303163	3	Centrifugal weight	B1	317150	1	Set of pump springs	D4	
230919	2	Screw	D2	269401	1	Control rod	D2	303216	1	Sprocket for 0.404" with clutch drum and bearing	B2	317300	1	Fan	E3	
232903	2	Screw	D1	270516	1	Disc	C3	303714	1	Cable drum	E3	318308	1	Fuel tank	E2	
236175	4	Screw	D2, E1	270710	1	Washer	D4	305112	1	Starter cable	E3	320101	1	Ignition cable	B4	
236176	6	Screw	C3, D1	270802	1	Felt seal	C4	307112	1	Rubber handle	E1	320112	1	Short circuiting cable	B4	
236179	5	Screw	C3, E4	270808	1	Protective washer	E3	307115	1	Starter handle	E3	322105	1	Stop button	E1	
233173	2	Screw	D4	272026	1	Seal	D4	310615	1	Air-venting pipe	C3	325011	1	Magneto coil	B4	
237048	2	Screw	E1	272027	1	Seal	C3	310616	1	Hose	E2	325110	1	Bearing bolt	B4	
240176	4	Screw	E3	272050	1	Seal	C3	310617	1	Hose	D2	325113	1	Screw	B4	
240177	9	Screw	B2	272051	1	Seal	C2	310619	1	Oil hose with spring	B3	325117	2	Washer	B4	
240205	6	Screw	A2, E2, E3	272052	1	Seal	C3	310630	1	Hose	D2	325118	1	Nut	B4	
240208	8	Screw	C1, D2	272054	1	Seal	C1	310708	1	Oil hose	C3	325186	1	Flywheel, compl.	C4, E3	
240952	3	Screw	C2, C3	272055	1	Seal	C1	311131	1	Nipple	E2	325187	1	Flywheel magneto, compl.	E3	
244127	1	Screw	B4	272056	1	Seal	C1	311515	1	Hose clamp	E2	325188	1	Armature plate, compl.	E3	
244173	4	Screw	B2, C2, E4	272500	1	Insulating plate	E2	312218	1	Fuel tank cap	D2	325190	1	Armature plate	B4	
244992	3	Screw	A2	272501	1	Cable protector	D2	312216	1	Oil tank cap	B3	325191	1	Lubricating felt	B4	
245173	4	Screw	B2, C2, E4	275006	1	O-ring	D4	312712	1	Oil cock with filler	C2	325192	1	Capacitor	B4	
249900	2	Chain bar screw	B3	275022	1	O-ring	B3	312716	1	Air-venting valve	E2	325193	1	Contact breaker set	B4	
250103	1	Nut	B4	275029	1	O-ring	D2	315118	1	Oil strainer	C3	325320	1	Spark plug protector	C1	
250204	1	Nut	C3	275613	1	Seal ring	C3	315145	1	Filter, compl.	D2	325322	1	Spark plug	C1	
250208	2	Nut	A2	275716	1	Seal ring	B2	315307	1	Air strainer	E3	340607	1	Piston compl. Classes A-B, C-E	C2	
251106	4	Nut	A2, E2	277208	2	Vibration absorber	E2	315422	1	Air filter	D1	340610	1	Cylinder with piston	C2	
252710	1	Magneto nut	D3	277227	1	Seal for air filter	D1	315440	1	Air casing	D1	340612	1	Fan casing	E4	
253104	2	Lock nut	B2	277501	1	Cable sleeve	D1	316113	1	Choke flap	A4	340615	1	Rear casing	D1	
253708	1	Lock nut	A2	277516	1	Insulating cap	B4	316116	1	Lock spring	A4	340632	1	Handle support	E1	
259902	4	Nut with a neck	C2	277519	2	Bushing	E1	316122	4	Screw with star washer	A3	340653	1	Cylinder casing, compl.	C1	
260110	5	Washer	D3	277527	1	Cable sleeve	D2	316155	2	Pressure spring	A4	340655	1	Support	A2	
260112	2	Washer	C2	278008	3	Rubber plug	D3	316169	1	Lock ring	A3	340660	1	Crankcase, compl.	C2, C3	
260119	3	Washer	A2	278203	1	Sealing flange	D4	316315	1	Lever spring	A4	350117	1	Tubular handle	E2	
260741	0-1	Adjusting washer 0,1 mm	B4	279016	1	Block	D3	316401	1	Carburetor HS compl.	D2	350120	1	Silencer	B2	
260742	0-1	Adjusting washer 0,2 mm	B4	279027	1	Cover	C3	316403	1	Set of gaskets	A4	364010	1	Cutter link, right	A2	
260744	1	Washer	C2	279030	2	Lock	D1	316404	1	Diaphragm gasket	A3	364020	1	Cutter link, left	A2	
260746	2	Spacer washer	C2	279032	1	Cover	D1	316405	1	Fuel pump gasket	A4	364030	1	Side link	A2	
262078	1	Fastening plate	C3	279033	1	Interlock device	E1	316406	1	Welch plug	A3	364031	1	Side link with rivets	A2	
262080	2	Protector washer	A2, B3	279039	1	Choke arm	D1	316407	1	Welch plug	A3	364043	1	Drive link 43	A2	
264304	3	Tooth washer	D3	279041	1	Insulating flange	C1	316408	1	Main diaphragm	A3	364050	1	Rivet	A2	
264305	9	Tooth washer	A2, D2	279042	1	Insulation	E2	316409	1	Fuel pump diaphragm	A4	364352	1	Saw chain 43-0.404"-52, 15"	A3	
264306	6	Tooth washer	A2, D2	279043	1	Spacer	E2	316410	1	Adjuster screw, low speed	A4	364360	1	Saw chain 43-0.404"-60, 18"	A3	
264355	2	Tooth washer	C3	279047	1	Lug for starting throttle	E2	316411	1	Adjuster screw, high speed	A4	364369	1	Saw chain 43-0.404"-69,22"	A3	
264506	4	Spring washer	E2, E3	279049	1	Handle filler	E1	316412	1	Idling screw	A4	370816	1	Chain guide (bar) 15"	B3	
264533	1	Washer	B4	279050	1	Retainer	E1	316413	1	Pressure spring	A4	370826	1	Chain guide (bar) 18"	B3	
264536	4	Spring ring	C1	279051	1	Throttle control	E1	316414	1	Valve needle	A4	370836	1	Chain guide (bar) 22"	B3	
265103	1	Lock ring	B4	279052	1	Rubber spacer	D1	316415	1	Lever	A4	370896	1	Partner roller nose	A3	
265105	1	Lock ring	A2	279057	1	Control axle	E2	316416	1	Lever axle	A4					
265623	1	Lock ring	E2	293119	1	Spring	E1	316417	1	Screw	A3					
265808	3	Lock ring	B3, C3	293600	1	Spring	D4	316418	1	Strainer	A4					
265812	2	Lock ring	C2	294108	2	Spring	B1	316420	3	Screw with star washer	A4					
265813	1	Lock ring	C2	295107	1	Starter spring	E3	316421	1	Carburetor body	A4					
266055	2	Piston ring	C2	295607	1	Spring	E2	316422	1	Steering cage	A4					
267232	1	Lopping roller	E2	297910	1	Spring ring	E3									
267598	1	Bushing	C3	300101	1	Gudgeon pin	C2									

3-8-70

PARTNER R14T

A

B

C

D

E

1

2

3

4

