

Figure and Item numbers are referenced to the Illustrated Parts List, P/N 65633 unless otherwise indicated on this parts list sheet. Numbers in black circles refer to notes at the bottom of the page. Numbers in parenthesis following the part number indicate a quantity change from the illustrated parts list.

# MAC 1-10

Serial Numbers Prefixed 2-

FIG. & ITEM	PART NUMBER	NOMENCLATURE	FIG. & ITEM	PART NUMBER	NOMENCLATURE	FIG. & ITEM	PART NUMBER	NOMENCLATURE
1-1	110454	Nut	1-50	65821	Insulator	3-2	64872	Grip
1-2	100440	Washer	1-51	65604	Rod	3-3	105673	Pin
1-3	Fig. reference		1-52	102290	Screw	3-4	66194	Button
1-4	Fig. reference		1-53	63475 ②	Lockplate	3-5	64871	Button & Rod
1-5	102761	Screw	1-54	55636	Washer	3-6	61696	Seal
1-6	100352	Washer	1-55	Fig. reference		3-7	110378	Pin
1-7	61678	Plug	1-56	65674	Gasket	3-8	65734	Spring
1-8	101326	Nut	1-B	63396 ③	Insulator	3-9	65864	Trigger
1-9	105187	Screw	1-57	110353	Screw	3-10	103672	Screw
1-10	100004	Washer	1-58	102289	Screw	3-11	62973A	Wire
1-11	63408 ①	Frame	1-59	100352	Washer	3-12	62451	Contact
1-A	62271	Plug	1-60	63070	Brace	3-13	62950A	Base
1-12	103746	Nut	1-61	104534	Screw	3-14	62951	Button
1-13	65471	Clutch	1-62	104895	Screw	3-15	⑤	Insulator
1-14	64583	Retainer	1-63	110264	Washer	3-16	65816	Rod
1-15	63999	Spring	1-64	62337	Gasket			
1-16	62198B	Shoe	1-65	110341	Screw	4-	66503	Carburetor
1-17	65475	Rotor	1-66	65905	Spark Arr.	4-1	110397	Screw
1-18	62328	Spring	1-67	103360	Screw	4-2	65597	Plate
1-19	65472	Rivet	1-68	110264	Washer	4-3	65598	Diaphragm
1-20	64857	Pawl	1-69	62380	Cover	4-4	55690B	Seal
1-21	65473	Washer	1-70	62379B	Baffle	4-5	65868	Valve Set
1-22	65370	Spkt. Kit	1-71	65805	Body	4-6	66153	Seat
1-23	65368	Sprocket	1-72	62085A	Insulator	4-7	61151	Ball
1-24	110330	Bearing	1-73	65503	Shroud	4-8	63041 (1)	Valve
1-25	61692	Shim	1-74	Fig. reference		4-9	104814	Screw
1-26	103879	Key				4-10	62290A	Plate
1-27	65866	Cover	2-	65530	Guard Assy	4-11	65677	Retainer
1-28	65813	Nut	2-1	102144	Screw	4-12	65617	Plug
1-29	65457	Nameplate	2-2	102067	Nut	4-13	105617	"O" Ring
1-30	65815	Screen	2-3	110387	Washer	4-14	101289	Ring
1-31	62978	Screw	2-4	61705	Nut	4-15	65859	Spring
1-32	63073	Housing	2-5	101174	Washer	4-16	66552	Plunger
1-33	61721D	Cap Assy	2-6	62371	Retainer	4-17	66551	"O" Ring
1-34	64762	Cover	2-7	63985	Shield	4-18	104728	Screw
1-35	63040	Spring	2-8	63986	Washer	4-19	110337	Pin
1-36	62316	Guide	2-9	65526	Drum	4-20	62310	Lever
1-37	63041	Valve	2-10	110470	Rivet	4-21	62923A	Spring
1-38	65671	Gasket	2-11	62191A	Insert	4-22	63038	Valve
1-39	110334	Screw	2-12	62190A	Handle	4-23	65445	Needle
1-40	63656	Cover	2-13	59952A	Rope	4-24	104001	"O" Ring
1-41	62102	Gasket	2-14	36059	Spring	4-25	110483	Screw
1-42	64848	Hose	2-15	63987	Shield	4-26	104814	Screw
1-43	63932	Filter	2-16	61635A	Bushing	4-27	65430	Lever
1-44	103124	Screw	2-17	65519	Guard	4-28	65431	Needle
1-45	64856	Washer				4-29	62975	Swivel
1-46	55636	Washer				4-30	65428	Shaft
1-47	65726	Sleeve				4-31	66504	Body
1-48	Fig. reference		3-1	66648 ④	Tank			
1-49	65672	Gasket	3-A	105788	Rivet			

Continued

## NOTES

① Frame Assy includes Plug, P/N 62271, for attaching upper arm screw.

② Lockplate replaces Washer, P/N 64856.

③ Fuel Tank Insulator illustrated in Figure 3, Item 15.

④ Fuel Tank Assy includes two Rivets, P/N 105788 Items 2 to 15 inclusive, are not included in tank assembly.

⑤ Insulator listed as Item 1-B on this sheet.

