




AJ Series PARTS LIST SECTION

CARBURETORS

Illustration of Basic Parts standard throughout AJ Series Carburetor. For individual model listings see following pages.

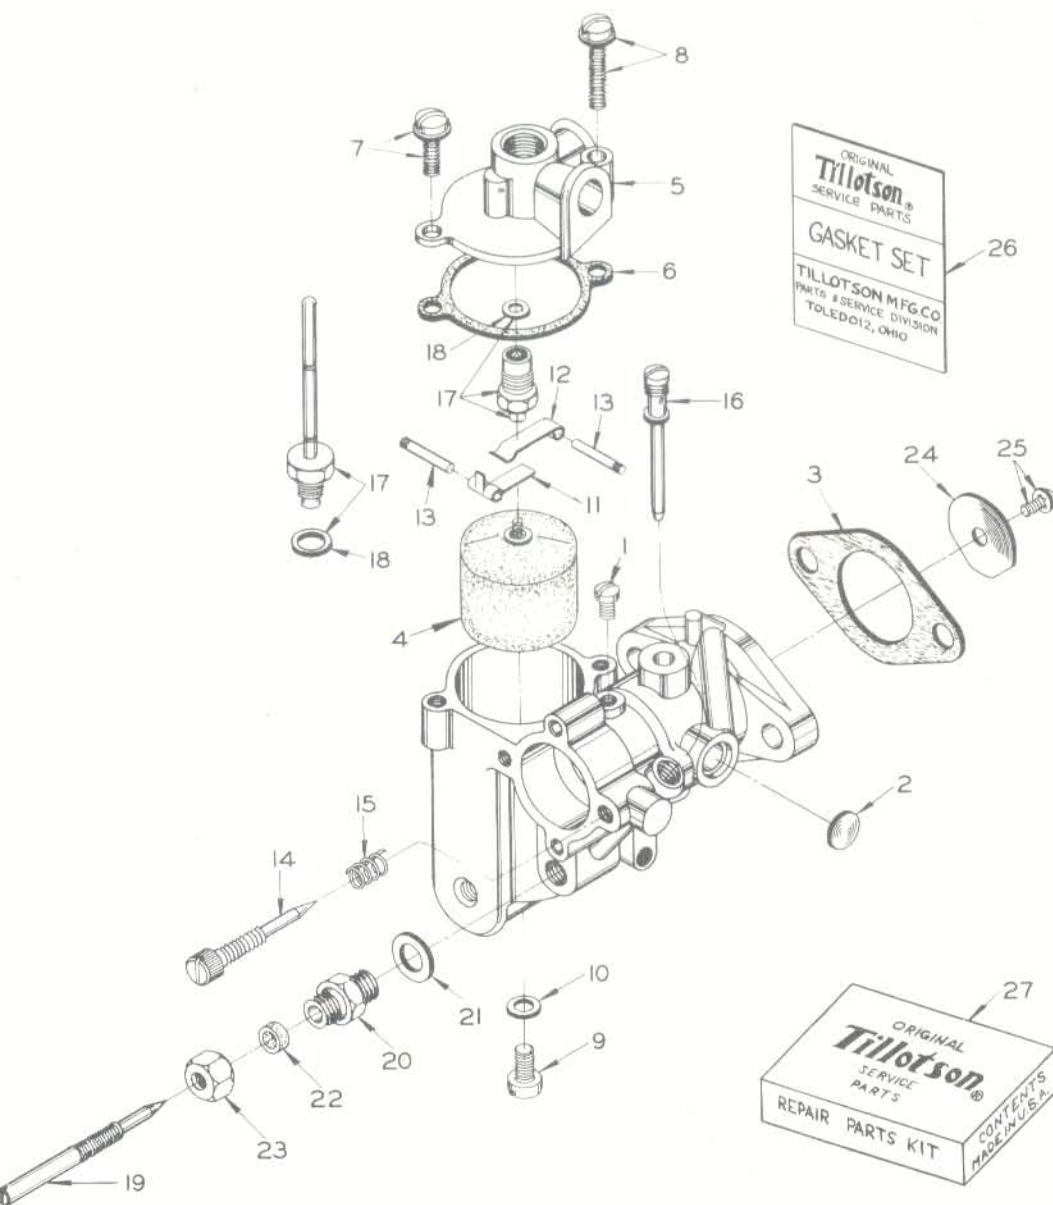


Ref. No.	Part Name
1	Body Channel Plug Screw
2	Body Channel Welch Plug
3	Flange Gasket
4	Float
5	Float Bowl Cover
6	Float Bowl Cover Gasket
7	Float Bowl Cover Screw & Lockwasher (Short)
8	Float Bowl Cover Screw & Lockwasher (Long)
9	Float Bowl Drain Plug
10	Float Bowl Drain Plug Gasket
11	Float Lever (Primary)
12	Float Lever (Secondary)
13	Float Lever Pin
14	Idle Adjustment Screw
15	Idle Adjustment Screw Spring
16	Idle Tube
17	Inlet Valve or Inlet Needle Seat & Gasket
18	Inlet Seat or Valve Gasket
19	Main Adjustment Screw
20	Main Adjustment Screw Gland
21	Main Adjustment Screw Gland Gasket
22	Main Adjustment Screw Packing
23	Main Adjustment Screw Packing Nut
24	Throttle Shutter
25	Throttle Shutter Screw & Lockwasher
26	Gasket & Packing Set
27	Repair Parts Kit

Parts illustrated are typical in appearance, and may not look exactly like the part required.



ADJUSTMENT AND SERVICE INSTRUCTIONS

GASOLINE LEVEL (D): Is approximately correct when $11/16$ th of an inch below bowl rim. Float is positioned on Valve Stem between 2 encircling slots and held by spring cotters. A constantly higher than normal level requires careful valve and seat cleaning or replacement. To replace Inlet Valve and Seat Assembly first remove cover, Plug Screw and top spring cotter encircling valve. Force valve downward until parallel with float top then with thumb and forefinger draw valve through bottom of float bowl and lower spring cotter will fall from bowl—socket wrench can now be used to easily remove valve seat. When an overhead float mechanism is used to replace Inlet Valve and Seat Assembly (B) first remove cover; Pinions (C-1) and Primary (B-2) and Secondary (B-1) Float Levers. Reverse for reassembly.

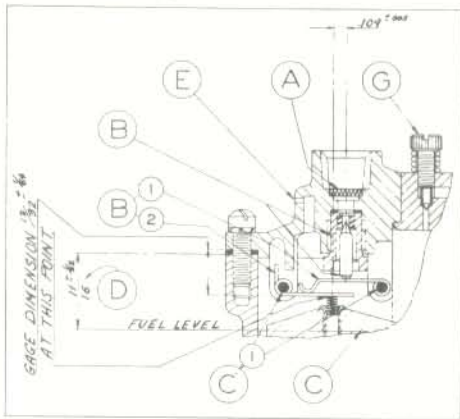

PROPER FLOAT LEVER ADJUSTMENT OF OVER-HEAD FLOAT MECHANISM: Secondary lever B-1 should be bent so that there is $13/32$ in. from the gasket face of the cover to bottom of lever B-2. This dimension should be checked with the cover upside down. Tang on B-2 primary lever should be bent so that there is approximately .040 clearance between inlet needle B and B-1 secondary lever.

ADJUSTMENT INSTRUCTIONS: Before starting motor have proper fuel mixture in tank. Open valve under tank. Loosen air valve on tank cap.

COLD MOTOR START: Advance magneto timing lever to start position or slightly to right of center. Open Main Adjustment Screw (19) approximately one turn open or to rich position on panel. Close Idle Adjustment Screw (14) to right (forcing will permanently injure both point and seat) then open from $1/2$ to $3/4$ of a turn. Attach starting rope. Depress primer plunger

center of float cover until bowl starts to flood. Pull starting rope vigorously.

If a choking mechanism is provided, close choke before pulling starting rope, and after the engine is running, open the choke.

TO ADJUST: Run warm motor at a good speed, then slowly close Main Adjustment Screw (19) to the right, or in, as far as possible without reducing engine speed or to run position on panel. Retard spark or magneto timing lever to left of center until stalling point of motor is approached. Now slowly close Idle Adjustment Screw (14) to the right, or in, until motor slows down—then open until motor speed increases. When motor speed does not increase further, a smooth and steady idle will be obtained and this will be the correct adjustment. Advance magneto timing lever and run motor at a good speed for a few moments, then recheck adjustments outlined in preceding paragraph.

After correct idle adjustment has once been made, further changes to this adjustment should not be necessary, either when starting a cold or hot motor, or when the motor is running at any speed.

WARM TO HOT MOTOR START: Advance spark or set magneto timing lever to start position. Do not change either Idle or Main Adjustments from previously adjusted positions. Attach starter rope and pull vigorously. If motor does not start promptly, prime sparingly.

Occasionally several attempts to start will result in flooding. Should this happen or if difficulty is experienced in starting, close Main Adjustment Screw (19) to a lean position, then crank motor several times cleaning crank case of excess fuel. When crank case mixture is correct, motor may run for a few seconds and stop. Now restarting will be prompt after opening Main Adjustment Screw (19) to run position and again re cranking.

SERVICE HINTS: Always strain fuel through a suitable medium when filling tank. Drain the carburetor occasionally. When deposits of dirt and water are observed after removing cover, clean the bowl and channels with compressed air. If Idle Tube (16) is removed for cleaning, be sure to replace its gasket when reassembling.

Before storing your motor for the winter thoroughly clean the carburetor of gasoline, water and dirt. This will assure you of a free flow of gasoline through it next spring.

TILLOTSON MANUFACTURING CO.






PARTS AND SERVICE DIVISION

TOLEDO 12, OHIO






SPECIAL PARTS ILLUSTRATIONS





SHAFT & LEVER ASSEMBLIES

				
A ₁	A ₂	A ₃	A ₄	A ₅











SHAFTS

						
B ₁	B ₂	B ₃				

LEVERS

				
C ₁	C ₂	C ₃	C ₄	

MISCELLANEOUS PARTS

				
D ₁	D ₂	D ₃	D ₄	D ₅
				
D ₆	D ₇	D ₈	D ₉	D ₁₀

TILLOTSON MANUFACTURING CO.














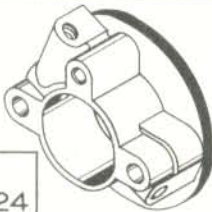





PARTS AND SERVICE DIVISION

TOLEDO 12, OHIO






SPECIAL PARTS ILLUSTRATIONS

MISCELLANEOUS PARTS

 D ₁₁	 D ₁₂	 D ₁₃	 D ₁₄	 D ₁₅
 D ₁₆	 D ₁₇	 D ₁₈	 D ₁₉	 D ₂₀
 D ₂₁	 D ₂₂	 D ₂₃	 D ₂₄	 D ₂₅
 D ₂₆	 D ₂₇	 D ₂₈	 D ₂₉	

SPRINGS

 E ₁	 E ₂	 E ₃		
---	---	---	--	--



BASIC PARTS ILLUSTRATIONS: See front cover for illustrations corresponding to reference numbers in list below.

SPECIAL PARTS ILLUSTRATIONS: See Page A for illustrations corresponding to reference letters in list below.

Model	Year Built	Superseding Model	Equipment
AJ-8B	1948-53	Kiekhaefer Corp.
AJ-10B	1947-49	Kiekhaefer Corp.
AJ-13B	1946-52	Kiekhaefer Corp.
AJ-15B	1950-51	Kiekhaefer Corp.
AJ-16A	1950-60	Scott

Ref. No.	Part Name	AJ-8B	AJ-10B	AJ-13B	AJ-15B	AJ-16A
D11	Body Channel Pipe Plug	0244	----	0244	----	----
1	*Body Channel Plug Screw	09897	----	----	----	----
2	*Body Channel Welch Plug	02531	02531	02531	02531	02531
3	Flange Gasket	011034	011034	011034	011034	011034
4	Float	08215	08215	08215	08215	08215
D14	*Float Retainer Clip (2)	05425	05425	05425	05425	05425
5	Float Bowl Cover	06882	06882	07216	07216	08027
6	Float Bowl Cover Gasket	07198	07198	07198	07198	07198
7	Float Bowl Cover Screw & Lockwasher (2)	08315	08315	08315	08315	08315
9	Float Bowl Drain Plug	0164	0164	0164	0164	0164
10	Float Bowl Drain Plug Gasket	0648	0648	0648	0648	0648
14	*Idle Adjustment Screw	06910	06910	06910	06910	06910
D4	*Idle Adjustment Screw Locknut	----	----	06243	06243	----
D13	*Idle Adjustment Screw Lockwasher	----	----	0759	0759	----
15	*Idle Adjustment Screw Spring	08736	05725	----	----	05725
D17	Idle Channel Welch Plug	----	----	----	02519	----
16	*Idle Tube	07113	07113	06905	06905	08173
D12	Idle Tube Gasket	----	----	----	----	06569
17	*Inlet Valve Seat & Gasket	06941	06941	06941	06941	06941
18	Inlet Seat Gasket	0212	0212	0212	0212	0212
D16	*Inlet Valve Channel Plug Screw	02395	02395	02395	02395	02395
D3	*Main Adj. Acorn Nut	----	----	----	----	06924
D13	*Main Adj. Acorn Nut Lockwasher	----	----	----	----	01675
D9	Main Adj. Knob	----	----	----	----	06923
19	*Main Adj. Screw	08587	08244	05829	05829	06921
20	Main Adj. Screw Gland	0702	0702	0702	0702	0702
21	Main Adj. Screw Gland Gasket	0676	0676	0676	0676	0676
22	Main Adj. Screw Packing	09112	09112	0705	0705	09112
23	Main Adj. Screw Packing Nut	0703	0703	0703	0703	0703
B1	Throttle Shaft	----	----	----	----	06903
B3	Throttle Shaft	07028	07028	----	----	----
E1	*Throttle Shaft Return Spring	06634	06634	----	----	06634
A1	Throttle Shaft & Lever	----	----	07417	07417	----
24	Throttle Shutter	06993	06993	07369	07369	07960
25	*Throttle Shutter Screw & Lockwasher	08317	08317	08317	08317	08317
C4	Throttle Stop Lever	06995	06995	----	----	07000
D5	*Throttle Stop Lever Ret. Screw	051	051	----	----	051
D18	Throttle Stop Pin	06918	06918	----	----	----
26	*GASKET & PACKING SET	GS-112	GS-112	GS-112	GS-112	GS-112
27	REPAIR PARTS KIT	RK-211	RK-212	RK-213	RK-213	RK-214

(*) Indicates contents of REPAIR PARTS KIT



BASIC PARTS ILLUSTRATIONS: See front cover for illustrations corresponding to reference numbers in list below.

SPECIAL PARTS ILLUSTRATIONS: See Page A for illustrations corresponding to reference letters in list below.

Model	Year Built	Superseding Model	Equipment
AJ-17A	1947-51		Scott
AJ-18A	1946-53		Scott
AJ-21A	1953-60		Muncie Gear Co.
AJ-22A	1950-54		Kiekhaefer Corp.
AJ-23A	1947-54		Kiekhaefer Corp.

Ref. No.	Part Name	AJ-17A	AJ-18A	AJ-21A	AJ-22A	AJ-23A
D1	Air Deflector	----	----	06970	06970	----
D20	Air Deflector Screw (Short)	----	----	01108	01108	----
D20	Air Deflector Screw (Long)	----	----	06607	06607	----
D15	Air Deflector Screw Spacer	----	----	06975	06975	----
D13	Air Deflector Screw Lockwasher (2)	----	----	0992	0992	----
1	*Body Channel Plug Screw	----	----	----	----	09897
2	*Body Channel Welch Plug	02531	02531	02531	02531	02531
3	Flange Gasket	011034	011034	011034	011034	011034
4	Float	08215	08215	08215	08215	08215
D14	*Float Retainer Clip (2)	05425	05425	05425	05425	05425
5	Float Bowl Cover	08027	08027	06882	06882	08193
6	Float Bowl Cover Gasket	07198	07198	07198	07198	07198
7	Float Bowl Cover Screw & Lkwshr. (2)	08315	08315	08315	08315	08315
9	Float Bowl Drain Plug	0164	0164	0164	0164	0164
10	Float Bowl Drain Plug Gasket	0648	0648	0648	0648	0648
14	*Idle Adjustment Screw	08354	08355	06910	06910	06910
15	*Idle Adjustment Screw Spring	05725	05725	05725	05725	08736
16	*Idle Tube	08173	07113	07113	07113	06905
D12	Idle Tube Gasket	06569	06569	----	----	----
17	*Inlet Valve, Seat & Gasket	06941	06941	06941	06941	06941
18	Inlet Seat Gasket	0212	0212	0212	0212	0212
D16	*Inlet Valve Channel Plug Screw	02395	02395	02395	02395	02395
C3	Main Adjustment Lever	----	----	06957	06957	----
D19	*Main Adjustment Lever Ret. Screw	----	----	0120	0120	----
19	*Main Adj. Screw	08064	08064	06974	06974	08442
20	Main Adj. Screw Gland	0702	0702	0702	0702	0702
21	Main Adj. Screw Gland Gasket	0676	0676	0676	0676	0676
22	Main Adj. Screw Packing	09112	09112	09112	09112	09112
23	Main Adj. Screw Packing Nut	0703	0703	0703	0703	0703
C2	Throttle Lever (Incl. Swivel)	----	06866	----	----	----
D20	*Throttle Lever Clamp Screw	----	0240	----	----	----
D19	*Throttle Lever Swivel Screw	----	0120	----	----	----
B1	Throttle Shaft	06903	----	----	----	----
B2	Throttle Shaft	----	07018	----	----	----
B3	Throttle Shaft	----	----	----	----	07028
E1	*Throttle Shaft Return Spring	06634	----	06634	----	06634
E3	*Throttle Shaft Return Spring	----	----	----	06996	----
A2	Throttle Shaft & Lever	----	----	----	07124	----
A3	Throttle Shaft & Lever	----	----	08225	----	----
24	Throttle Shutter	07908	08189	07961	07961	08187
25	*Throttle Shutter Screw & Lockwasher	08317	08317	08317	08317	08317
C4	Throttle Stop Lever	07000	----	----	----	06995
D5	*Throttle Stop Lever Ret. Screw	051	----	----	----	051
D18	Throttle Stop Pin	----	----	----	----	06918
26	*GASKET & PACKING SET	GS-112	GS-112	GS-112	GS-112	GS-112
27	REPAIR PARTS KIT	RK-215	RK-216	RK-219	RK-219	RK-220

(*) Indicates contents of REPAIR PARTS KIT

TILLOTSON MANUFACTURING CO.

PARTS AND SERVICE DIVISION

TOLEDO 12, OHIO



BASIC PARTS ILLUSTRATIONS: See front cover for illustrations corresponding to reference numbers in list below.

SPECIAL PARTS ILLUSTRATIONS: See Page A for illustrations corresponding to reference letters in list below.

Model	Year Built	Superseding Model	Equipment
AJ-28A	1948-52	Industrial Engineering Ltd.
AJ-29A	1949-50	Kiekhaefer Corp.
AJ-30A	1949-52	Kiekhaefer Corp.
AJ-30B	1953-56	Kiekhaefer Corp.
AJ-32A	1949-54	Kiekhaefer Corp.

Ref. No.	Part Name	AJ-28A	AJ-29A	AJ-30A	AJ-30B	AJ-32A
1	Body Channel Plug Screw	----	----	02232	02232	09897
2	*Body Channel Welch Plug	02531	02531	02531	02531	02531
2	Body Channel Welch Plug	02519	----	----	----	----
D11	Body Channel Pipe Plug	0244	----	----	----	----
D21	Choke Control & Cover Stud	----	----	08727	----	----
D13	Choke Control & Cover Stud Lkwshr. (2)	----	----	0992	----	----
3	Flange Gasket	011034	011034	011034	011034	011034
4	Float	08215	08215	08215	08215	08215
D14	*Float Retainer Clip (2)	05425	05425	05425	05425	05425
5	Float Bowl Cover	07216	08590	08590	08590	08590
6	Float Bowl Cover Gasket	07198	07198	07198	07198	07198
7	Float Bowl Cover Screw & Lkwshr. (2)	08315	08315	----	08315	08315
9	Float Bowl Drain Plug	0164	----	----	----	----
10	Float Bowl Drain Plug Gasket	0648	----	----	----	----
14	*Idle Adjustment Screw	06910	06910	09019	09019	08690
D4	*Idle Adjustment Screw Locknut	06243	----	----	----	----
D13	*Idle Adj. Screw Lockwasher	0759	----	----	----	----
15	*Idle Adj. Screw Spring	----	08736	08736	08736	08736
16	*Idle Tube	06905	08307	07113	07113	06907
D12	Idle Tube Gasket	06569	----	----	----	----
17	*Inlet Valve, Seat & Gasket	06941	08637	08669	08669	08637
18	Inlet Valve Seat Gasket	0212	02510	02510	02510	02510
D16	*Inlet Valve Channel Plug Screw	02395	----	----	----	----
D20	*Inlet Valve Channel Plug Screw	----	08639	08639	08639	08639
D12	Inlet Valve Channel Plug Screw Gasket	----	02510	02510	02510	02510
19	*Main Adj. Screw	05829	06974	09441	09441	09948
20	Main Adj. Screw Gland	0702	0702	0702	0702	0702
21	Main Adj. Screw Gland Gasket	0676	0676	0676	0676	0676
22	Main Adj. Screw Packing	0705	09112	09112	09112	09112
23	Main Adj. Screw Packing Nut	0703	0703	0703	0703	0703
B3	Throttle Shaft	----	07028	07028	07028	07028
E1	*Throttle Shaft Return Spring	----	06634	06634	09807	06634
A1	Throttle Shaft & Lever (Assembled)	07417	----	----	----	----
24	Throttle Shutter	08106	08187	09239	09239	08962
25	*Throttle Shutter Screw & Lockwasher	08317	08317	08317	08317	08317
C4	Throttle Stop Lever	----	06995	06995	06995	06995
D5	*Throttle Stop Lever Ret. Screw	----	051	051	051	051
26	*GASKET & PACKING SET	GS-112	GS-113	GS-113	GS-113	GS-113
27	REPAIR PARTS KIT	RK-213	RK-225	RK-226	RK-226	RK-229

(*) Indicates contents of REPAIR PARTS KIT



BASIC PARTS ILLUSTRATIONS: See front cover for illustrations corresponding to reference numbers in list below.

SPECIAL PARTS ILLUSTRATIONS: See Page A for illustrations corresponding to reference letters in list below.

Model	Year Built	Superseding Model	Equipment
AJ-33A	1950-54		Kiekhaefer Corp.
AJ-34A	1950-53		Kiekhaefer Corp.
AJ-35A	1950-52		Titan Chain Saws
AJ-36A	1950-53		Kiekhaefer Corp.
AJ-37B	1951-54		Titan Chain Saws

Ref. No.	Part Name	AJ-33A	AJ-34A	AJ-35A	AJ-36A	AJ-37B
1	Body Channel Plug Screw	09897	09897	----	09897	----
2	*Body Channel Welch Plug	02531	02531	02531	02531	02531
3	Flange Gasket	011034	011034	011034	011034	011034
4	Float	07646	08215	07646	08215	07646
D23	Float Guide Stem	----	----	08958	----	08958
D12	Float Guide Stem Gasket	----	----	0212	----	0212
D14	*Float Retainer Clip (2)	----	05425	----	05425	----
5	Float Bowl Cover	08742	08193	08954	08590	07348
6	Float Bowl Cover Gasket	07198	07198	07198	07198	07198
D11	Float Bowl Cover Plug Screw	----	----	0244	----	----
7	Fl. Bowl Cover Screw & Lkw. (Short)	08315	08315	08315	08315	08315
8	Fl. Bowl Cover Screw & Lkw. (Long)	08754	----	08754	----	08754
9	Float Bowl Drain Plug	----	----	0164	----	0164
10	Float Bowl Drain Plug Gasket	----	----	0648	----	0648
11	*Float Lever (Primary)	07350	----	07350	----	07350
12	*Float Lever (Secondary)	07349	----	07349	----	07349
13	*Float Lever Pin (2)	07460	----	07460	----	07460
14	*Idle Adj. Screw	08964	08690	06910	08690	06910
15	*Idle Adj. Screw Spring	08736	05725	05725	08736	05725
16	*Idle Tube	06907	06905	06905	06907	06905
D22	*Inlet Connection Screen	07283	----	----	----	----
D20	*Inlet Valve Channel Plug Screw	----	02395	----	08639	----
D12	Inlet Valve Channel Plug Screw Gasket	----	----	----	02510	----
17	*Inlet Needle, Seat & Gasket	08756	----	09430	----	09430
17	*Inlet Valve, Seat & Gasket	----	08624	----	08637	----
18	Inlet Valve Seat Gasket	02817	0212	02817	02510	02817
19	*Main Adj. Screw	08757	08922	08971	09948	08971
20	Main Adj. Screw Gland	0702	0702	0702	0702	0702
21	Main Adj. Screw Gland Gasket	0676	0676	0676	0676	0676
22	Main Adj. Screw Packing	09112	09112	0705	09112	0705
23	Main Adj. Screw Packing Nut	0703	0703	0703	0703	0703
C1	Throttle Lever	----	----	01830	----	01830
D20	*Throttle Lever Clamp Screw	----	----	0240	----	0240
B3	Throttle Shaft	08758	07028	08955	07028	08955
E1	*Throttle Shaft Return Spring	09807	06634	06634	06634	----
24	Throttle Shutter	08962	08187	07125	08187	09428
25	*Throttle Shutter Screw & Lockwasher	08317	08317	08317	08317	08317
C4	Throttle Stop Lever	06995	06995	----	06995	----
D18	Throttle Stop Pin	----	06918	----	----	----
D5	*Throttle Stop Lever Ret. Screw	051	051	----	051	----
26	*GASKET & PACKING SET	GS-113	GS-112	GS-113	GS-113	GS-113
27	REPAIR PARTS KIT	RK-228	RK-230	RK-150	RK-229	RK-150

(*) Indicates contents of REPAIR PARTS KIT

TILLOTSON MANUFACTURING CO.

PARTS AND SERVICE DIVISION

TOLEDO 12, OHIO



BASIC PARTS ILLUSTRATIONS: See front cover for illustrations corresponding to reference numbers in list below.

SPECIAL PARTS ILLUSTRATIONS: See Page A for illustrations corresponding to reference letters in list below.

Model	Year Built	Superseding Model	Equipment
AJ-37C	1954	Titan Chain Saws
AJ-38A	1950-56	Disston
AJ-38AX	1952-56	Disston
AJ-39A	1953	Titan Chain Saws
AJ-40A	1953	Kiekhaefer Corp.

Ref. No.	Part Name	AJ-37C	AJ-38A	AJ-38AX	AJ-39A	AJ-40A
D24	Air Horn	----	09467	----	----	----
D25	Air Horn Gasket	----	09462	----	----	----
D20	*Air Horn Screw (2)	----	06607	----	----	----
D13	*Air Horn Screw Lockwasher (2)	----	0992	----	----	----
1	Body Channel Plug Screw	----	----	----	----	09897
2	*Body Channel Welch Plug	02531	02531	02531	02531	02531
D26	Choke Friction Plunger	----	05454	----	----	----
E2	Choke Friction Plunger Spring	----	03860	----	----	----
D20	Choke Friction Plug Screw	----	07912	----	----	----
A4	Choke Shaft & Lever	----	09464	----	----	----
D27	Choke Shutter	----	08285	----	----	----
D19	Choke Shutter Screw & Lockwasher	----	08942	----	----	----
3	Flange Gasket	011034	011034	011034	011034	011034
4	Float	07646	08215	08215	07646	09805
D23	Float Guide Stem	08958	----	----	08958	----
D12	Float Guide Stem Gasket	0212	----	----	0212	----
D14	*Float Retainer Clip (2)	----	05425	05425	----	----
5	Float Bowl Cover	07348	07216	07216	08954	08742
6	Float Bowl Cover Gasket	07198	07198	07198	07198	07198
D11	Float Bowl Cover Plug Screw	----	----	----	0244	----
7	Float Bowl Cover Screw & Lkw. (Short)	08315	08315	08315	08315	08315
8	Float Bowl Cover Screw & Lkw. (Long)	08754	----	----	08754	08754
9	Float Bowl Drain Plug	0164	0164	0164	0164	----
10	Float Bowl Drain Plug Gasket	0648	0648	0648	0648	----
11	*Float Lever (Primary)	07350	----	----	07350	07350
12	*Float Lever (Secondary)	07349	----	----	07349	07349
13	*Float Lever Pin (2)	07460	----	----	07460	07460
14	*Idle Adj. Screw	06910	06910	06910	06910	08690
15	*Idle Adj. Screw Spring	05725	08736	08736	05725	010109
D2	*Idle Adj. Screw Cup	----	----	----	----	010030
D17	Idle Channel Welch Plug	----	02519	02519	----	----
D20	*Idle Speed Regulating Screw	----	05095	05095	----	----
E2	*Idle Speed Regulating Screw Spring	----	0788	0788	----	----
16	*Idle Tube	06905	07113	07113	06905	06907
17	*Inlet Needle, Seat & Gasket	09430	----	----	09430	010400
17	*Inlet Valve, Seat & Gasket	----	06941	06941	----	----
D22	*Inlet Connection Screen	----	----	----	----	07283
18	Inlet Seat Gasket	02817	0212	0212	02817	----
D16	*Inlet Valve Channel Plug Screw	----	02395	02395	----	----
19	*Main Adj. Screw	08971	09469	09469	08971	09981
20	Main Adj. Screw Gland	0702	0702	0702	0702	0702
21	Main Adj. Screw Gland Gasket	0676	0676	0676	0676	0676
22	Main Adj. Screw Packing	0705	0705	0705	0705	09112
23	Main Adj. Screw Packing Nut	0703	0703	0703	0703	0703
C1	Throttle Lever	01830	----	----	01830	----
D20	*Throttle Lever Clamp Screw	0240	----	----	0240	----
B2	Throttle Shaft	----	09458	09458	----	----
B3	Throttle Shaft	08955	----	----	08955	09806
E1	*Throttle Shaft Return Spring	----	----	----	06634	09807
24	Throttle Shutter	08646	08646	08646	07125	08187
25	*Throttle Shutter Screw & Lockwasher	08317	08942	08942	08317	08942
C4	Throttle Stop Lever	----	----	----	----	06995
C4	*Throttle Stop Lever	----	06482	06482	----	----
D5	*Throttle Stop Lever Ret. Screw	----	051	051	----	051
26	*GASKET & PACKING SET	GS-113	GS-111	GS-111	GS-113	GS-107
27	REPAIR PARTS KIT	RK-150	RK-231	RK-231	RK-150	RK-107

(*) Indicates contents of REPAIR PARTS KIT

TILLOTSON MANUFACTURING CO.

PARTS AND SERVICE DIVISION

TOLEDO 12, OHIO



BASIC PARTS ILLUSTRATIONS: See front cover for illustrations corresponding to reference numbers in list below.

SPECIAL PARTS ILLUSTRATIONS: See Page A for illustrations corresponding to reference letters in list below.

Model	Year Built	Superseding Model	Equipment
AJ-41A	1953-54	Kiekhaefer Corp.
AJ-42A	1953	Kiekhaefer Corp.
AJ-43A	1953	Kiekhaefer Corp.
AJ-44A	1954	Kiekhaefer Corp.
AJ-45A	1954	Kiekhaefer Corp.

Ref. No.	Part Name	AJ-41A	AJ-42A	AJ-43A	AJ-44A	AJ-45A
1	Body Channel Plug Screw	09897	09897	09897	09897	09897
2	*Body Channel Welch Plug	02531	02531	02531	02531	02531
3	Flange Gasket	011034	011034	011034	011034	011034
4	Float	09805	09805	09805	09805	09805
5	Float Bowl Cover	08742	08742	08742	08742	010248
6	Float Bowl Cover Gasket	07198	07198	07198	07198	07198
7	Float Bowl Cover Screw & Lkw. (Short)	08315	08315	08315	08315	08315
8	Float Bowl Cover Screw & Lkw. (Long)	08754	08754	08754	08754	08754
11	*Float Lever (Primary)	07350	07350	07350	07350	07350
12	*Float Lever (Secondary)	07349	07349	07349	07349	07349
13	*Float Lever Pin (2)	07460	07460	07460	07460	07460
14	*Idle Adj. Screw	08690	08690	08690	010155	010295
15	*Idle Adj. Screw Spring	08736	08736	08736	08736	011103
16	*Idle Tube	06907	06907	06907	06907	010293
D16	Idle Tube Plug Screw	----	----	----	----	02395
D22	*Inlet Connection Screen	----	07283	07283	010301	010301
17	*Inlet Needle & Seat	010400	010400	010400	010400	010400
19	*Main Adj. Screw	09981	09968	09968	010168	010298
20	Main Adj. Screw Gland	0702	0702	0702	0702	0702
21	Main Adj. Screw Gland Gasket	0676	0676	0676	0676	0676
22	Main Adj. Screw Packing	09112	09112	09112	09112	09112
23	Main Adj. Screw Packing Nut	0703	0703	0703	0703	----
D9	Main Adj. Screw Knob	----	----	----	010319	----
D28	*Main Adj. Screw Knob Set Screw	----	----	----	06969	----
B3	Throttle Shaft	09806	09806	09806	08758	09806
E1	*Throttle Shaft Return Spring	09807	09807	09807	09807	09807
24	Throttle Shutter	08962	08187	08187	08962	08962
25	*Throttle Shutter Screw & Lockwasher	08942	08942	08942	08317	08942
C4	Throttle Stop Lever	06995	06995	06995	06995	06995
D5	*Throttle Stop Lever Ret. Screw	051	051	051	051	051
26	*GASKET & PACKING SET	GS-107	GS-107	GS-107	GS-107	GS-107
27	REPAIR PARTS KIT	RK-107	RK-116	RK-116	RK-146	RK-152

(*) Indicates contents of REPAIR PARTS KIT



BASIC PARTS ILLUSTRATIONS: See front cover for illustrations corresponding to reference numbers in list below.

SPECIAL PARTS ILLUSTRATIONS: See Page A for illustrations corresponding to reference letters in list below.

Model	Year Built	Superseding Model	Equipment
AJ-45B	1955 Kiekhaefer Corp.
AJ-46A-	1954-58 Kiekhaefer Corp.
AJ-47A	1954-56 Kiekhaefer Corp.
AJ-49A	1955 Kiekhaefer Corp.
AJ-50A	1956-58 Kiekhaefer Corp.

Ref. No.	Part Name	AJ-45B	AJ-46A	AJ-47A	AJ-49A	AJ-50A
1	Body Channel Plug Screw	09897	09897	09897	09897	09897
2	*Body Channel Welch Plug	02531	02531	02531	02531	02531
D7	*Filter Element	----	----	----	----	010741
3	Flange Gasket	011034	011034	011034	011034	011034
4	Float	09805	09805	09805	09805	09805
5	Float Bowl Cover	010397	011233	010397	010397	----
6	Float Bowl Cover Gasket	07198	07198	07198	07198	07198
7	Float Bowl Cover Screw & Lkw. (Short)	08315	08315	08315	08315	08315
8	Float Bowl Cover Screw & Lkw. (Long)	08754	08754	08754	08754	010745
11	*Float Lever (Primary).	07350	07350	07350	07350	07350
12	*Float Lever (Secondary).	07349	07349	07349	07349	07349
13	*Float Lever Pin (2)	07460	07460	07460	07460	07460
14	*Idle Adj. Screw	010402	010155	010402	010402	010402
15	*Idle Adj. Screw Spring	011103	08736	011103	011103	011103
16	*Idle Tube	010293	010232	010433	010293	010433
D16	Idle Tube Plug Screw	02395	----	02395	02395	02395
D22	*Inlet Connection Screen	----	----	010301	----	----
17	*Inlet Needle, Seat & Gasket	010400	010400	010400	010400	010790
18	Inlet Seat Gasket	----	----	----	----	010165
19	*Main Adjustment Screw	010514	010327	010410	010410	010410
20	Main Adjustment Screw Gland	0702	0702	0702	0702	0702
21	Main Adjustment Screw Gland Gasket	0676	0676	0676	0676	0676
22	Main Adjustment Screw Packing	09112	09112	09112	09112	09112
23	Main Adjustment Screw Packing Nut	0703	0703	0703	0703	0703
D8	Strainer Cover Gasket (Small)	----	----	----	----	010744
D8	Strainer Cover Gasket (Large).	----	----	----	----	010746
D10	*Strainer Cover Screw	----	----	----	----	010742
D12	Strainer Cover Screw Gasket	----	----	----	----	010743
C4	Throttle Stop Lever	06995	06995	06995	06995	06995
D5	*Throttle Stop Lever Ref. Screw	051	051	051	051	051
B3	Throttle Shaft.	09806	010291	010415	010415	010415
E1	*Throttle Shaft Return Spring	09807	09807	09807	09807	011036
24	Throttle Shutter	08962	08011	08962	010512	08962
25	*Throttle Shutter Screw & Lockwasher	08942	010280	010280	010280	010280
26	*GASKET & PACKING SET	GS-107	GS-107	GS-107	GS-107	GS-123
27	REPAIR PARTS KIT	RK-193	RK-155	RK-168	RK-232	RK-313

(*) Indicates contents of REPAIR PARTS KIT



BASIC PARTS ILLUSTRATIONS: See front cover for illustrations corresponding to reference numbers in list below.

SPECIAL PARTS ILLUSTRATIONS: See Page A for illustrations corresponding to reference letters in list below.

Model	Year Built	Superseding Model	Equipment
AJ-50AT	1958	Kiekhaefer Corp.
AJ-51A	1956-57	Kiekhaefer Corp.
AJ-52A	1956-57	Kiekhaefer Corp.
AJ-53A	1956-59	Kiekhaefer Corp.
AJ-54A	1959	Kiekhaefer Corp.

Ref. No.	Part Name	AJ-50AT	AJ-51A	AJ-52A	AJ-53A	AJ-54A
D6	Body Channel Plug Screw	----	----	----	----	0675
D12	Body Channel Plug Screw Gasket	----	----	----	----	02510
1	Body Channel Plug Screw	09897	09897	09897	09897	09897
2	*Body Channel Welch Plug	02531	02531	02531	02531	02531
D7	*Filter Element	010741	010741	010741	010741	010741
3	Flange Gasket	011034	011034	011034	011034	011034
4	Float	09805	09805	09805	09805	09805
6	Float Bowl Cover Gasket	07198	07198	07198	07198	07198
7	Float Bowl Cover Screw (Short)	08315	08315	08315	08315	08315
8	Float Bowl Cover Screw (Long)	010745	010745	010745	010745	010745
11	*Float Lever (Primary)	07350	07350	07350	07350	07350
12	*Float Lever (Secondary)	07349	07349	07349	07349	07349
13	*Float Lever Pin (2)	07460	07460	07460	07460	07460
14	*Idle Adj. Screw	010402	010402	011389	010402	011721
D2	Idle Adj. Screw Cup	----	----	010030	010030	----
15	*Idle Adj. Screw Spring	011103	011103	011103	011103	011103
16	*Idle Tube	010433	010433	010433	010433	010433
D16	Idle Tube Plug Screw	02395	02395	02395	02395	02395
17	*Inlet Needle, Seat & Gasket	010790	010790	010790	010790	010790
18	Inlet Seat Gasket	010165	010165	010165	010165	010165
19	*Main Adj. Screw	010410	010410	09968	010410	----
20	Main Adj. Screw Gland	0702	0702	0702	0702	----
21	Main Adj. Screw Gland Gasket	0676	0676	0676	0676	----
22	Main Adj. Screw Packing	09112	09112	09112	09112	----
23	Main Adj. Screw Packing Nut	0703	0703	0703	0703	----
D29	*Main Fuel Jet (.055) Std.	----	----	----	----	011722
	Main Fuel Jet (.053)	----	----	----	----	011765
	Main Fuel Jet (.051)	----	----	----	----	011764
	Main Fuel Jet (.049)	----	----	----	----	011763
D12	Main Fuel Jet Gasket	----	----	----	----	06076
D8	Strainer Cover Gasket (Small)	010744	010744	010744	010744	010744
D8	Strainer Cover Gasket (Large)	010746	010746	010746	010746	010746
D10	*Strainer Cover Screw	010742	010742	010742	010742	010742
D12	Strainer Cover Screw Gasket	010743	010743	010743	010743	010743
C4	Throttle Stop Lever	----	06995	06995	06995	06995
D5	*Throttle Stop Lever Ret. Screw	051	051	051	051	051
B3	Throttle Shaft	010415	010415	010415	010415	010415
E1	*Throttle Shaft Return Spring	09807	09807	09807	09807	011036
24	Throttle Shutter	08962	010512	011037	08962	08962
25	*Throttle Shutter Screw & Lockwasher	010280	010280	010280	010280	010280
26	*GASKET & PACKING SET	GS-123	GS-123	GS-123	GS-123	GS-123
27	REPAIR PARTS KIT	RK-313	RK-313	RK-371	RK-313	RK-394

(*) Indicates contents of REPAIR PARTS KIT

TILLOTSON MANUFACTURING CO.

PARTS AND SERVICE DIVISION

TOLEDO 12, OHIO



BASIC PARTS ILLUSTRATIONS: See front cover for illustrations corresponding to reference numbers in list below.

SPECIAL PARTS ILLUSTRATIONS: See Page A for illustrations corresponding to reference letters in list below.

Model	Year Built	Superseding Model	Equipment
AJ-54AT	1959	Kiekhaefer Corp.
AJ-55A	1959	Kiekhaefer Corp.
AJ-55AT	1959	Kiekhaefer Corp.
AJ-56A	1959	Kiekhaefer Corp.
AJ-56AB	1959	Kiekhaefer Corp.

Ref. No.	Part Name	AJ-54AT	AJ-55A	AJ-55AT	AJ-56A	AJ-56AB
D6	Body Channel Plug Screw	0675	0675	0675	0675	0675
D12	Body Channel Plug Screw Gasket	02510	02510	02510	02510	02510
1	Body Channel Plug Screw	09897	09897	09897	09897	09897
2	*Body Channel Welch Plug	02531	02531	02531	02531	02531
D7	*Filter Element	010741	010741	010741	010741	010741
3	Flange Gasket	011034	011034	011034	011034	011034
4	Float	09805	09805	09805	09805	09805
6	Float Bowl Cover Gasket	07198	07198	07198	07198	07198
7	Float Bowl Cover Screw & Lkw. (Short)	08315	08315	08315	08315	08315
8	Float Bowl Cover Screw & Lkw. (Long)	010745	010745	010745	010745	010745
11	*Float Lever (Primary)	07350	07350	07350	07350	07350
12	*Float Lever (Secondary)	07349	07349	07349	07349	07349
13	*Float Lever Pin (2)	07460	07460	07460	07460	07460
14	*Idle Adjustment Screw	011721	010402	010402	011389	011389
D2	Idle Adjustment Screw Cup	-----	-----	-----	010030	010030
15	*Idle Adjustment Screw Spring	011103	011103	011103	011103	011103
16	*Idle Tube	010433	010433	010433	010433	010433
D16	Idle Tube Plug Screw	02395	02395	02395	02395	02395
17	*Inlet Needle Seat & Gasket	010790	010790	010790	010790	010790
18	Inlet Seat Gasket	010165	010165	010165	010165	010165
D29	*Main Fuel Jet (.057)	-----	-----	-----	011394 std.	-----
	Main Fuel Jet (.055)	011722 std.	011722 std.	011722 std.	011722	011722 std.
	Main Fuel Jet (.053)	011765	011765	011765	011765	011765
	Main Fuel Jet (.051)	011764	011764	011764	011764	011764
	Main Fuel Jet (.049)	011763	011763	011763	-----	011763
D12	Main Fuel Jet Gasket	06076	06076	06076	06076	06076
D8	Strainer Cover Gasket (Small)	010744	010744	010744	010744	010744
D8	Strainer Cover Gasket (Large)	010746	010746	010746	010746	010746
D10	*Strainer Cover Screw	010742	010742	010742	010742	010742
D12	Strainer Cover Screw Gasket	010743	010743	010743	010743	010743
C4	Throttle Stop Lever	-----	06995	-----	06995	06995
D5	*Throttle Stop Lever Ret. Screw	051	051	051	051	051
B3	Throttle Shaft	010415	010415	010415	010415	010415
E1	*Throttle Shaft Return Spring	09807	011036	09807	09807	09807
24	Throttle Shutter	08962	08962	08962	011037	011037
25	*Throttle Shutter Screw & Lockwasher	010280	010280	010280	010280	010280
26	*GASKET & PACKING SET	GS-123	GS-123	GS-123	GS-123	GS-123
27	REPAIR PARTS KIT	RK-394	RK-395	RK-395	RK-396	RK-426

(*) Indicates contents of REPAIR PARTS KIT



BASIC PARTS ILLUSTRATIONS: See front cover for illustrations corresponding to reference numbers in list below.
 SPECIAL PARTS ILLUSTRATIONS: See Pages A and B for illustrations corresponding to reference letters in list below.

Model	Year Built	Superseding Model	Equipment
AJ-57A	1960		Kiekhaefer Corp.

Ref. No.	Part Name	AJ-57A
D6	Body Channel Plug Screw	0675
D12	Body Channel Plug Screw Gasket	02510
1	Body Channel Plug Screw	09897
2	* Body Channel Welch Plug	02531
D7	* Filter Element	010741
3	Flange Gasket	011034
4	Float	09805
6	Float Bowl Cover Gasket	07198
7	Float Bowl Cover Screw & Lkwsr. (Short)	08315
8	Float Bowl Cover Screw & Lkwsr. (Long)	010745
11	* Float Lever (Primary)	07350
12	* Float Lever (Secondary)	07349
13	* Float Lever Pin (2)	07460
14	* Idle Adjustment Screw	012247
15	* Idle Adjustment Screw Spring	011103
16	* Idle Tube	010232
17	* Inlet Needle, Seat & Gasket	010790
18	Inlet Seat Gasket	010165
D29	Main Fuel Jet (.049)	011763
	Main Fuel Jet (.047)	012027
	* Main Fuel Jet (.045) Std.	012101
	Main Fuel Jet (.043)	012284
	Main Fuel Jet (.041)	012370
D12	Main Fuel Jet Gasket	06076
D8	Strainer Cover Gasket (Small)	010744
D8	Strainer Cover Gasket (Large)	010746
D10	* Strainer Cover Screw	010742
D12	Strainer Cover Screw Gasket	010743
C4	Throttle Stop Lever	06995
D5	* Throttle Stop Lever Ret. Screw	051
B3	Throttle Shaft	010291
E1	* Throttle Shaft Return Spring	09807
24	Throttle Shutter	09239
25	* Throttle Shutter Screw & Lockwasher	010280
26	* GASKET & PACKING SET	GS-123
27	REPAIR PARTS KIT	RK-461

(*) Indicates contents of REPAIR PARTS KIT