


Tillotson®

FUEL PUMPS


PARTS LIST SECTION

FP-1

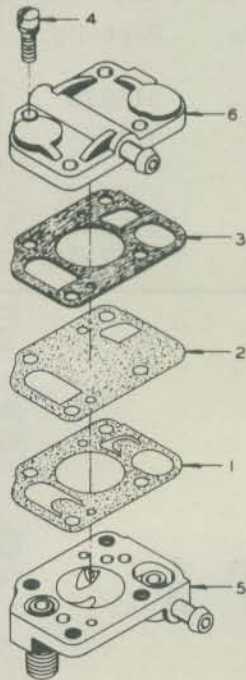

Ref. No.	Part No.	Name
1	014220	Diaphragm (Valve)
2	014221	Diaphragm (Pulse)
3	013721	Gasket
4	08315	Screw (4)
5	013925	Pump Body
6	013926	Pump Cover

FP-2

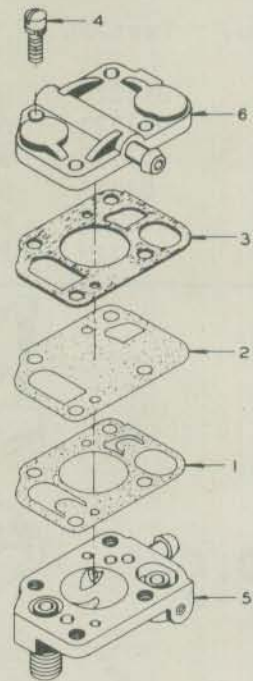


Ref. No.	Part No.	Name
1	014220	Diaphragm (Valve)
2	014221	Diaphragm (Pulse)
3	013721	Gasket
4	08315	Screw (4)
5	014200	Pump Body
6	014261	Pump Cover

Assemble pumps as illustrated


TILLOTSON MANUFACTURING CO.
PARTS AND SERVICE DIVISION
TOLEDO, OHIO 43612

FP-3

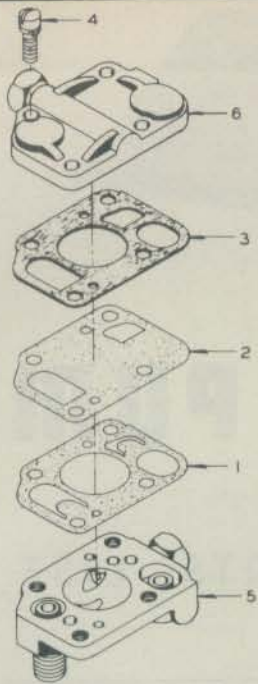


Ref. No.	Part No.	Name
1	014220	Diaphragm (Valve)
2	014221	Diaphragm (Pulse)
3	013721	Gasket
4	08315	Screw (4)
5	014218	Pump Body
6	014219	Pump Cover

FP-4

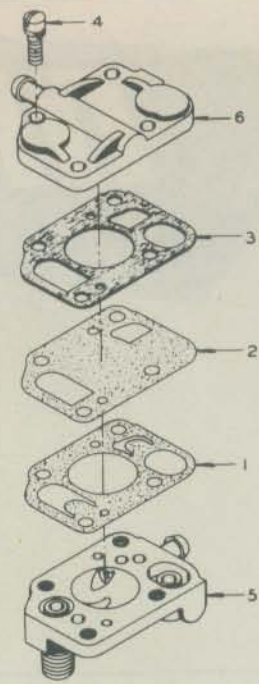


Ref. No.	Part No.	Name
1	014220	Diaphragm (Valve)
2	014221	Diaphragm (Pulse)
3	013721	Gasket
4	08315	Screw (4)
5	014200	Pump Body
6	014234	Pump Cover

FP-5

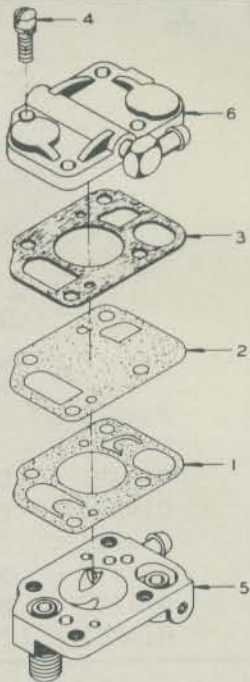

Ref. No.	Part No.	Name
1	014220	Diaphragm (Valve)
2	014221	Diaphragm (Pulse)
3	013721	Gasket
4	08315	Screw (4)
5	014200	Pump Body
6	014363	Pump Cover

FP-6

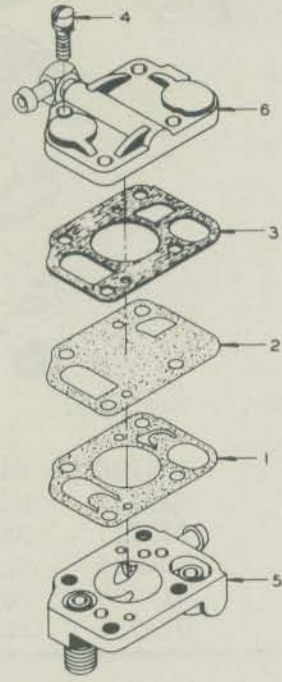

Ref. No.	Part No.	Name
1	014220	Diaphragm (Valve)
2	014221	Diaphragm (Pulse)
3	013721	Gasket
4	08315	Screw (4)
5	014200	Pump Body
6	014418	Pump Cover